


Windmill 750 Manual

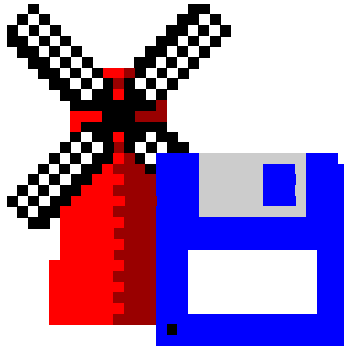

Windmill Software Limited

Manual Code: WM.750-1.0

Issue Date: December 2000

Information in this document is subject to change without notice.

Written by Jill Studholme (www.studholme.net) for
Windmill Software

© Windmill Software Limited 2000-2001

PO Box 58

North District Office

Manchester M8 8QR

UK

Telephone: +44 (0)161 833 2782

E-mail: sales@windmill.co.uk

<http://www.windmill.co.uk/>

<http://www.windmillsoft.com/>

Table of Contents

1	Introduction	1.1
1.1	Printing	1.1
2	Using the Windmill 750 Hardware	2.1
2.1	Introduction	2.1
2.2	Plugging the Windmill 750 into the Computer	2.1
2.3	The Windmill 750's Lights	2.1
2.4	Using Several Windmill 750s	2.2
2.5	Analogue Input Connection Notes	2.3
2.5.1	Single-Ended Inputs	2.3
2.5.2	Input Voltage Range	2.3
2.5.3	Maximum Input Voltage	2.3
2.5.4	Unconnected Inputs	2.4
2.5.5	Pin Numbers	2.4
2.6	Digital Input and Output Connection Notes	2.5
2.6.1	Input Voltages	2.5
2.6.2	Contact Closures	2.5
2.6.3	Output Drive	2.5
2.6.4	Pin Numbers	2.5
2.7	Counter Connection Notes	2.6
2.7.1	Input Voltages	2.6
2.7.2	Count Inputs	2.6
2.7.3	Pin Numbers	2.6
2.8	Specifications	2.8
2.8.1	Analogue Inputs	2.8
2.8.2	Digital Inputs and Outputs	2.8
2.8.3	Counters	2.8

3	Installing and Configuring Windmill Software	3.1
3.1	Introduction	3.1
3.2	What is Windmill Software?	3.1
3.3	Installing Windmill Software	3.2
3.3.1	Upgrading From Windmill Version 4.3	3.2
3.3.2	Moving Windmill	3.2
3.3.3	Important Installation Notes	3.2
3.4	Configuring Your System	3.3
3.4.1	Adding New Hardware	3.3
3.4.2	Changing Hardware Settings	3.4
3.4.3	ConfIML Summary Window	3.5
3.4.4	The Software Signal Generator	3.6
3.4.5	The IML Device Icon	3.6
4	Using Windmill Software with the 750	4.1
4.1	Introduction	4.1
4.2	Configuring the 750 Driver Software with ConfIML	4.2
4.2.1	Choices in ConfIML	4.2
4.2.2	Windmill 750 Devices	4.2
4.2.3	Saving the Settings	4.3
4.3	Options in SetupIML	4.4
4.3.1	Analogue Inputs	4.4
4.3.2	Digital Ports	4.4
4.3.3	Grouping I/O Lines into Multi-Bit Channels	4.5
4.3.4	Event Counters	4.6
4.4	The Rest of the Windmill 5 Software Suite	4.7

Introduction

Thank you for purchasing the Windmill 750 package. This Manual tells you:

- About the 750 unit and how to connect your signals (Chapter 2)
- How to install the Windmill 5 software (Chapter 3)
- How to use Windmill software with the 750 unit (Chapter 4)

To use the 750 package you need a PC with a USB port. It should be running Windows 98SE, Windows 2000 or later.

1.1 Printing

This manual has been designed to be printed on A5 size paper. When printing to A4 paper, if your printer permits, you can print 2 pages of the Manual onto one A4 sheet in landscape orientation.

Using the Windmill 750 Hardware

2.1 Introduction

The Windmill 750 lets you monitor 16 analogue voltage inputs, 16 digital inputs & outputs and 8 counters.

This chapter tells you how to connect your signals to the 750. After making your connections, see Chapter 3 for details of installing the software.

2.2 Plugging the Windmill 750 into the Computer

Plugging the 750 into your PC could not be easier: just use the USB cable provided. You don't have to switch off your computer or even restart Windows.



The Windmill 750 is powered from the PC: you don't need an extra power supply box.

2.3 The Windmill 750's Lights

The 750 has two red lights labelled ENUM and BUSY. Neither of these comes on until you have installed the Windmill software.

ENUM ENUM stands for Enumerated. This is lit when the 750 has been powered on by the USB plug and play controller. It is a good indication that the Windmill USB driver software has been correctly loaded.

BUSY This is lit for the duration of each USB communication. It is not active until the 750 has been enumerated.

2.4 Using Several Windmill 750s

As you can connect up to eight 750s to the PC, each one must have some way of identifying itself. This is provided by 3 pins on the 37-way D connector. (If you have just the one Windmill 750, its ID Code will be 0 and you can ignore this section.)

The pins in question are numbers 10, 28 and 29. You set an ID code by connecting these pins to 0 V, as follows.

ID Code	Pin 10	Pin 28	Pin 29
0	no	no	no
1	no	no	yes
2	no	yes	no
3	no	yes	yes
4	yes	no	no
5	yes	no	yes
6	yes	yes	no
7	yes	yes	yes

See the Pin Connections Table on page 2.7.

Make a note of the ID Codes: you'll need them when using Windmill ConflML to install the driver software. You may find it helpful to label your Windmill 750 plugs with their codes for quick identification.

Note: Set the ID code before connecting the 750s to the PC.

2.5 Analogue Input Connection Notes

The Windmill 750 provides 16 single-ended analogue inputs. It uses a 12-bit fast converter. The software automatically causes 8 conversions to be taken and averaged to reduce noise.

2.5.1 Single-Ended Inputs

With single-ended inputs you measure the difference between the input signal and the 750 ground which is connected to mains earth via the computer.

Differences in Earth Levels

The earth is not a constant 0 V: it is at different levels at different locations. The further apart the locations, the greater the likelihood of earth variation. Make a connection between two earths and the difference in levels can drive large currents, known as earth loops. It's best practice, therefore, to keep your signal sources as close to the Windmill 750 as possible.

Noise Errors

Single-ended inputs are sensitive to noise errors. Noise (unwanted signal contamination) is added when signal wires act as aerials, picking up environmental activity. Again, it helps to keep your signal wires short.

2.5.2 Input Voltage Range

The 750 operates correctly with input voltages in the range ± 10.240 V.

2.5.3 Maximum Input Voltage

The input multiplexers are protected against dc voltages of 33 V above the power supply. This means ± 48 V if the computer is switched on, ± 33 V if it is switched off. If the over-voltage is transient then protection extends as far as ± 300 V. When a voltage above the power supply is applied to the unit its protection mechanism comes into action, and this draws some current from the signal source. This effect can be a problem when the computer is switched off as it now draws current

from any signal. This current is limited by 4K7 resistors. Extra series resistors can be added to reduce this fault current.

2.5.4 Unconnected Inputs

You can leave unused inputs unconnected, but if you attempt to read from these unconnected inputs do not expect to get 0 V. They could be any value. If another connected channel has recently been read, the unconnected input will return a similar value. This is not crosstalk. It occurs because the input capacitance of the amplifier is charged to the voltage of the previous channel and has little incentive to change when connected to an open circuit.

2.5.5 Pin Numbers

Make your connections to the 37-way D connector as detailed in the table on page 2.7.

2.6 Digital Input and Output Connection Notes

The Windmill 750 provides digital input to the computer and output control by the computer. Its 16 general purpose input and output lines are arranged in 2 groups or ports. Each port can be either input or output (set using the Windmill SetupIML program). All ports power-up as inputs. The ports are referred to as Port 0 and Port 1. Port 1 also functions as 8 event counters, detailed in the next section.

2.6.1 Input Voltages

All inputs are high impedance CMOS type. They are TTL and 5 V CMOS compatible. Input Voltages should be within the range 0 to 5 V.

2.6.2 Contact Closures

You can interface to contact closures using a resistor to tie the input to either 5 or 0 V. The contact then switches the line to either 0 or 5 V.

2.6.3 Output Drive

The outputs are TTL and 5 V CMOS compatible. They can drive 15 LSTTL loads.

2.6.4 Pin Numbers

Make the I/O connections to the digital 37-way connector. See the Pin Connections Table on page 2.7.

2.7 Counter Connection Notes

The Windmill 750 provides eight 16-bit totalise (event) counters, which can each count up to 65535. These are located on Port 1 of the digital I/O connector. If you are using counters, set Port 1 as an input only, using the Windmill SetupIML software.

The 750 monitors the state of the 8 input lines once every millisecond and maintains a count for each of them. It does this whether or not you intend to use the lines as counters. You can still read Port 1 as a normal digital input, even if you are also using it to count.

2.7.1 Input Voltages

All inputs are high impedance CMOS type. They are TTL and 5 V CMOS compatible. Input Voltages should be within the range 0 to 5 V.

2.7.2 Count Inputs

A valid count is declared if the input is low for 2 milliseconds then high for two milliseconds. This gives a theoretical maximum count speed of 250 Hz.

2.7.3 Pin Numbers

Make the counter connections to Port 1 of the Digital Connector. The counter pin numbers are on page 2.7.

Windmill 750 - Pin Connections

Analogue Channel 0	37	19	0 V Analogue
Analogue Channel 2	36	18	Analogue Channel 1
Analogue Channel 4	35	17	Analogue Channel 3
Analogue Channel 6	34	16	Analogue Channel 5
Analogue Channel 8	33	15	Analogue Channel 7
Analogue Channel 10	32	14	Analogue Channel 9
Analogue Channel 12	31	13	Analogue Channel 11
Analogue Channel 14	30	12	Analogue Channel 13
ID Code 2	29	11	Analogue Channel 15
ID Code 1	28	10	ID Code 0
Port 1 Bit 1	27	9	Port 1 Bit 0
Port 1 Bit 3	26	8	Port 1 Bit 2
Port 1 Bit 5	25	7	Port 1 Bit 4
Port 1 Bit 7	24	6	Port 1 Bit 6
Port 0 Bit 1	23	5	Port 0 Bit 0
Port 0 Bit 3	22	4	Port 0 Bit 2
Port 0 Bit 5	21	3	Port 0 Bit 4
Port 0 Bit 7	20	2	Port 0 Bit 6
		1	0 V Digital

Please read the Connection Notes on the previous pages before making your connections.

2.8 Specifications

Maximum number of 750s	8
Maximum length of cable	5 m per cable
Maximum distance from PC	can be increased by use of USB hubs

2.8.1 Analogue Inputs

Number of inputs	16
Maximum safe input voltage	
Computer on	±48 V
Computer off	±33 V
Transient	±300 V
Range	±10.240 V
Maximum linearity error	1 LSB
Input impedance	100 MΩ
Resolution	12 bits

2.8.2 Digital Inputs and Outputs

Maximum number of inputs	16
Maximum number of outputs	16
Power-up state	all inputs
Maximum speed	160 channels per second
Voltage Inputs	
Compatibility	TTL and 5 V CMOS
Range	0 to 5 V
Voltage Outputs	
Compatibility	TTL and 5 V CMOS
Drive	15 LSTTL loads

2.8.3 Counters

Maximum number of counters	8
Resolution	16 bits
Type of counters	Event (totalise)
Maximum count speed	160 counts per second
Compatibility	TTL and 5 V CMOS
Input voltage range	0 to 5 V

Installing and Configuring Windmill Software

3.1 Introduction

This chapter explains how to install and configure the Windmill measurement and control software. There are two steps.

1. Install the software onto the hard disk.
2. Tell the software about the hardware you have.

For installation you will need a personal computer with a USB port, that is running Windows 98SE, Windows 2000 or later.

3.2 What is Windmill Software?

Windmill is a ready-to-run suite of applications for data acquisition and control. You can be up and running in very little time as no programming is required. The standard suite includes data logging, charting and output control applications. You can also transfer data directly into third-party applications like Microsoft Excel or Access. Other Windmill modules are available—see our Internet catalogue for details at www.windmillsoft.com.

3.3 Installing Windmill Software

1. Connect the 750 data acquisition unit to your computer, as detailed in Chapter 2.
2. Install the Windmill software:
Insert the CD. The Installation software should run automatically. If not select Run from the Start menu and type d:\setup (where d: is your CD drive).

You are asked where you wish to install the software. You can use the default folder—C: WINDMILL—or you can enter your own choice, to use a different drive for example. The program will create the required folder and copy the software onto your hard disk.

3. When installation is complete the IML Configuration program, ConfIML automatically starts. This asks for details of your hardware. See Section 3.4 for details.

3.3.1 Upgrading From Windmill Version 4.3

Run the “Uninstall” program from its icon in the Windmill group and then install Windmill 5.

3.3.2 Moving Windmill

Run Uninstall from its icon in the Windmill group. You can now re-install Windmill elsewhere.

3.3.3 Important Installation Notes


1. When installing Windmill, always use the CD supplied by Windmill Software Limited. Keep this disk in a safe place—copies of this disk will not work.
2. Unless you have bought a multiple licence, you are only permitted to run one copy of the software at any one time. Please contact your supplier if you require a multiple licence.

3.4 Configuring Your System

The Windmill Configuration program, ConfIML, records the details of your data acquisition hardware. It will run at the end of the installation process, and you should run it again from Windows whenever your acquisition hardware changes—for example when you install additional units.

When the Configuration program is run during installation it starts in the “Adding New Hardware” section. At other times it starts in the Summary Window (Section 3.4.3).

3.4.1 Adding New Hardware

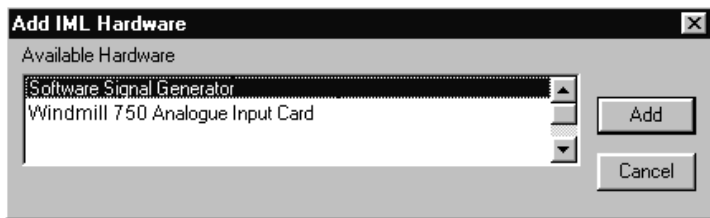

Adding New Hardware Devices to the Windmill System

The Add IML Hardware dialogue lists the acquisition and control devices for which you have installed drivers. Select a type of hardware and press the Add button. This will take you to the Hardware Settings dialogue (Section 3.4.2).

3.4.2 Changing Hardware Settings

ConfIML needs to know some information about your 750 unit. Press the Help button, or refer to Chapter 4 of this Manual, if in doubt about the answers. The Default button will reset all the answers to Windmill's default settings.

If you have installed other hardware drivers, see these Chapters or Manuals for further information on their settings.

Windmill 750 See Chapter 4 of this Manual.

DDE Servers For help with DDE servers controlled by the Harvester program, see the *Harvester User Manual*.

Windmill Repeat Client For help with the Windmill Repeat client for Ethernet networks, see the *Repeat User Manual*.

Modbus, RS232, RS422 and RS485 Hardware For help with serial devices controlled by the COMIML driver, see the comDebug Help file.


Microlink Hardware For help with Microlink hardware see the *IML Software with Microlink Hardware Manual*.

Other Hardware For help with other types of hardware see the *Windmill with "Your Hardware" Manual*.

Press OK in the Settings dialogue and the ConfIML summary window appears.

3.4.3 ConfIML Summary Window

The ConfIML Summary Window shows the hardware device or devices you have added.

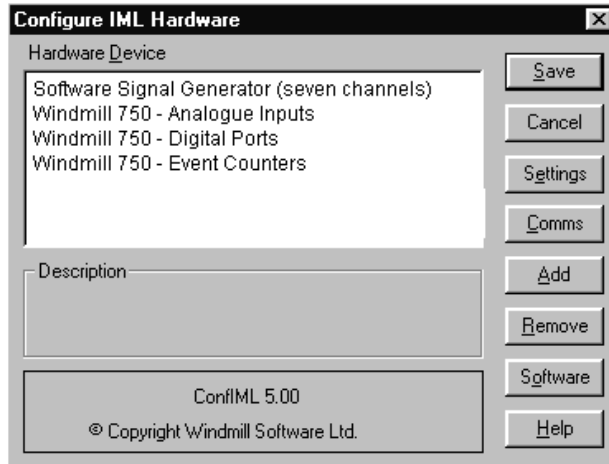

ConfIML Summary Window

You can now:

- press Save to record the current configuration and close ConfIML;
- press Add to install additional hardware;
- select an installed device and press Settings to adjust the settings you specified for that device (if any);
- Select an installed device and press Comms to adjust the communications protocol for that device (if any);
- select an installed device and press Remove to delete that device from the list;
- press Software to authorise your software;
- press Cancel to close ConfIML without saving the changes.

You must save a configuration which correctly describes your data acquisition hardware before you can use any other Windmill programs.

After closing ConfIML start the SetupIML program and choose how you wish to use the hardware. Refer to SetupIML's Help file (setupiml.hlp) or the *Windmill User Manual* (available from our Internet catalogue at www.windmillsoft.com) for details.

Remember that if you make any changes to your data acquisition hardware—adding extra 750 units for example—you must re-run ConfIML and update the software configuration accordingly.

3.4.4 The Software Signal Generator

In addition to data acquisition and control hardware, ConfIML lists the Software Signal Generator. This is a special driver which simulates a device with seven channels, each channel producing a different signal. No special hardware is required—the data values are produced by calculation.

The Software Signal Generator lets you experiment and practise with Windmill, without being concerned about the hardware

To install the signal generator you first need to add it to the list of devices. In the ConfIML Summary window press the Add button (Section 3.4.1). Select Software Signal Generator and again press the Add button. You're taken to the Hardware Settings dialogue (Section 3.4.2) where you can choose options for five of the channels. Press the Help button in this dialogue for more information on the signal generator.

3.4.5 The IML Device Icon

Whenever you run a Windmill program one or more IML Device icons will appear. Different icons identify different hardware drivers, software signal generators and so on. The Windmill applications can't run without these, so don't close them whilst using Windmill.

Using Windmill Software with the 750

4.1 Introduction

This chapter explains which settings in the Windmill ConfIML and SetupIML programs apply to the 750.


ConfIML records details of the location and type of measurement & control hardware in your system. It was described Chapter 3. SetupIML lets you create libraries of setup files with individual channel settings. It is described in the SetupIML Help file (setupiml.hlp) and Chapter 3 of the *Windmill User Manual*, available from our Internet shop: www.windmillsoft.com.

Make sure your 750 is plugged into the computer's USB port before starting the Windmill software.

4.2 Configuring the 750 Driver Software with ConfIML

4.2.1 Choices in ConfIML

When you install the driver software for the 750, you will be asked some questions about your hardware.

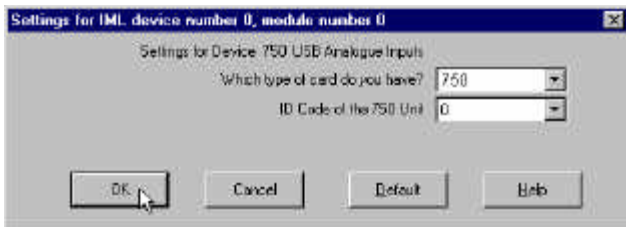

The ConfIML Settings Screen

Which Type of Card do you have?

Choose the 750.

ID Code of the 750 Unit?

As you can connect several 750s to your PC, you need to tell ConfIML which one you are currently configuring. Do this by selecting the correct ID Code. If you have only one 750 its ID Code is 0. (There should be as many ID codes as there are 750 units connected, and each code should be different. If not, change the codes on individual units as detailed in Chapter 2, *Using the 750 Hardware*.)

4.2.2 Windmill 750 Devices

After making your choices and pressing OK, your 750 is shown as 3 hardware devices: 750 analogue inputs, 750 digital ports and 750 event counters.

4.2.3 Saving the Settings

Save your settings and they will be used every time you run Windmill. You do not need to run ConfIML again, unless you add more hardware or want to change the settings.

4.3 Options in SetupIML

SetupIML is the Windmill program that lets you save libraries of setup files, each holding details about how you want to use individual channels. A Windmill 750 is shown as 3 devices in SetupIML: Analogue Inputs, Digital Inputs and Event Counters. Choose one from SetupIML's Device menu. Now double-click a channel to configure it. Full details of using SetupIML are in its Help file (setupiml.hlp) and Chapter 3 of the *Windmill Manual*, available from our Internet shop at <http://www.windmillsoft.com/>.

4.3.1 Analogue Inputs

The input channels are numbered 0 to 15. Using SetupIML you can configure each channel as follows:

- enable or disable
- re-name
- give a new units name, scale factor and offset
- set alarm levels

4.3.2 Digital Ports

The Windmill 750 unit provides two digital ports, each with 8 lines. You can use each port for input or output. You can explicitly control the choice, or it can be deduced automatically by the software. All ports start as inputs, but if any data is sent to a port by a Windmill program it immediately switches to output mode. Output lines can also be controlled by the alarm detection features of the input channels. This will cause the whole port to switch to output mode.

You can also use port 1 for event counting—in which case you must set it as an input.

The channels are numbered as follows:

0100	Line 0 of port 0
0101	Line 1 of port 0
0102	Line 2 of port 0
..	...
0107	Line 7 of port 0
0108	Direction control signal for port 0
0109	not used

0110	Line 0 of port 1
0111	Line 1 of port 1
...	...
0117	Line 7 of port 1
0118	Direction control signal for port 1

Renaming Channels and Digital States

In SetupIML you can replace the channel numbers with meaningful names.

By default, each channel is linked to a single line and the two digital states are called ON and OFF. You can also change these names to more suitable ones, for example FAST and SLOW or OPEN and SHUT.

4.3.3 Grouping I/O Lines into Multi-Bit Channels

SetupIML lets you group the lines within each port into multi-bit channels, which are displayed or controlled as single values transferred via the first channel in the group. Multi-bit values can be chosen as binary, decimal or hexadecimal, e.g.

Binary	Decimal	Hexadecimal
11	3	3
1010	10	A
10001	17	11
11111111	255	FF

Channels 0108, 0118 are the direction control signals for ports 0 and 1. When set to 0, the whole port is used for input; when 1, the port is used for output. These channels can be viewed and also altered, but they are normally disabled and must be explicitly enabled from SetupIML before use. As noted above, direction control can usually be sensed automatically by the software.

4.3.4 Event Counters

The Windmill 750 unit provides eight 16-bit event counters. The default names are 0200, 0201, 0202, etc.

Each counter starts at zero and counts pulses on the corresponding input lines, to a maximum of 65535. They can be reset to zero at any time by sending "0" to the channel using the AnalogOut, Graphics or Test-Seq programs. No other values can be sent to the counters.

You can use SetupIML to:

- change the names
- enable or disable each channel
- choose one of two operating modes—accumulating count or resetting count
- apply a scale factor or offset to the count

Accumulating Count

Simply keeps counting until explicitly reset.

Resetting Count

Starts again from zero after each reading. This shows the number of pulses since the last reading, but it can only be used where a single program is reading the counter. If several different programs were accessing the counter simultaneously, they would all be resetting it at different times, so the results would be unpredictable.

Scale Factor and Offset

SetupIML lets you apply a scale factor and offset to the count. For example, if the pulses came from a flow meter which produced one pulse for each 50 millilitres, then a scale factor of 0.05 would give a reading in litres.

4.4 The Rest of the Windmill 5 Software Suite

The Windmill 5 suite of software that comes with the 750, comprises: ConfIML; SetupIML; the display and control panels—AnalogOut, DigitalOut & DDE Panel; Logger and Chart.

The display and control panels let you send data to, or display data from, any number of analogue and digital channels. Logger logs data to disk from up to 100 channels whilst Chart displays moving charts of data from up to 8 channels. For more channels, or different logging and charting speeds, simply run more instances of Logger and Chart. Full details of all these programs are given in their on-line Help files. Alternatively you can buy the *Windmill Manual* from our Internet catalogue at <http://www.windmillsoft.com/>

Should you need more sophisticated analysis or presentation, you can share data with other Windows applications using dynamic data exchange (DDE). For example, you can process data as it's collected using Microsoft Excel. See the DDE Panel Help file for more details.

We regularly update our Help files, according to questions our customer ask. To download the latest updates visit <http://www.windmill.co.uk/help.html>

There are many other optional programs in the Windmill range. **Graphics** lets you design and create your own Windmill displays—process mimics, wiring diagrams, bar charts, annunciator panels...whatever you wish. **Test-Seq** interprets a file of commands, and controls a test-rig accordingly. **Replay** replays a data file graphically.

To be informed when new Windmill products are launched, be given data acquisition hints and tips, and read articles on measurement and control; subscribe to our free newsletter *Monitor* (ISSN 1472-0221) at <http://www.windmill.co.uk/newsletter.html>

Index

A

adding new hardware 2.2-3, 3.3
analogue input 2.3, 2.8, 4.4

C

changing hardware settings 3.4
ConfIML 3.3, 3.5, 4.2-3
contact closure 2.5
counter 2.6, 2.8, 4.6

D

digital input and output 2.5-6, 3.2, 4.4
digital ports 2.8

E

event counter 2.6, 4.6

I

id code 2.2, 4.2
installing
 750 USB unit 2.1
 Windmill software 3.2
introduction 1.1-2

M

moving Windmill software 3.2
multi-bit channels 4.5

N

new hardware 3.3

P

plug 2.1
power 2.1
printing 1.1

R

range 2.3, 2.5, 2.6, 2.8

S

SetupIML 4.4-6
single-ended inputs 2.3
software
 see Windmill software
specifications 2.8

T

totalise counter 2.6

U

upgrading Windmill software 3.2

W

Windmill software 3.1-6, 4.1-7
 ConfIML 3.3-5
 installing 3.2
 moving 3.2
 SetupIML 4.4-6
 upgrading 3.2