

WINDMILL SOFTWARE ERROR CODES

0 No error

GPIBLIB

- 1 Unknown driver command code
- 2 TCSET value byte missing
- 3 TOSET value byte missing
- 4 No GPIB device ready
- 5 EOI signalled end of data
- 6 Terminating char found
- 7 Timed out waiting for data
- 8 Timed out during read cycle
- 9 Timed out waiting to send data

- 10 Timed out during write cycle
- 11 GPIB hardware missing or faulty
- 12 GPIB drivers not open
- 13 Copy protection problem

COMMSLIB

- 16 System or hardware configuration not suitable
- 17 Command not yet completed
- 18 Device not open
- 19 Bad COMMSLIB user handle

- 20 Previous reply still in system
- 21 No reply expected (prog error)
- 22 Transmission timeout while sending command
- 23 Specified device does not exist
- 24 Out of memory, or too many apps in use
- 25 No IML devices installed – need to run ConfIML
- 26 Problem with GPIB drivers - run TEST488 for details
- 27 Fatal error in link to IML device
- 28 Bad serial baud rate
- 29 Non-fatal error in link to IML device – recovery possible

- 30 Reply is bigger than buffer
- 31 Not requested (prog error)
- 32 Old version of GPIB drivers

33 No free buffers in COMMSLIB

34 No data packet ready

35 Data packet is too large

IMSLIB

- 50 System is being partitioned by SetupIML
- 51 Setup being configured by SetupIML
- 52 A channel is already in use
- 53 Specified setup file not found
- 54 IMS file format error
- 55 IMSLIB out of memory
- 56 IML device reported problem in setup - possibly intended for different hardware
- 57 Setup already loaded (NOT ERROR)
- 58 Setup load completed (NOT ERROR)
- 59 Bad Setup name

- 60 Lock count underflow (prog error)
- 61 Specified file already exists
- 62 Unable to create specified file
- 63 Disk full while writing file
- 64 Failed to read channel details
- 65 Not in partitioning mode (prog error)
- 66 Bad IMSLIB operation code
- 67 Not in configuring mode (prog error)
- 68 Specified channel not in setup
- 69 Attempt to duplicate channel
- 70 Too many setups in use
- 71 Bad setup key number
- 72 Setup has been changed
- 73 IMSLIB DLL not loaded
- 74 Old version of IMSLIB
- 75 Buffer too small

IML – COMMAND EXECUTION

- 100 Unrecognised command or macro
- 101 Unspecified hardware failure
- 102 Unspecified software failure
- 103 Insufficient memory
- 104 Failed to write data into hardware
- 105 Failed to read data from hardware

- 106 Failed to configure hardware as required
- 107 Error in communication from host
- 108 Input value out of range
- 109 Output value out of range

- 110 Insufficient memory to store macro
- 111 Internal memory corrupted
- 112 Macros nested too deeply, or not recursive macro
- 113 Hardware configuration not suitable
- 114 Data not yet ready – try again later
- 115 Non-volatile storage corrupted
- 116 Unable to write to non-volatile storage
- 117 Unable to trigger high speed scan
- 118 Buffer overflow
- 119 Transfer aborted by user
- 120 End of data reached

IML – DEFINE COMMAND

- 200 channel number not available
- 201 channel name not known
- 202 channel grouped with preceding channel
- 203 no attributes specified
- 204 unrecognised attribute code
- 205 D attribute not applicable to this channel
- 206 D value is not suitable
- 207 E value is not suitable
- 208 F attribute not applicable to this channel
- 209 F value is not suitable

- 210 I attribute not applicable to this channel
- 211 I value is not suitable
- 212 M value is not suitable
- 213 Name already in use
- 214 Name not acceptable
- 215 Name must not begin with Frame-ID character
- 216 O attribute not applicable to this channel
- 217 O value is not suitable
- 218 R attribute not applicable to this channel
- 219 R value is not suitable

- 220 S attribute not applicable to this channel
- 221 S value is not suitable
- 222 T attribute not applicable to this channel
- 223 T value is not suitable

- 224 U value not acceptable
- 225 W attribute not applicable to this channel
- 226 W value is not suitable
- 227 C attribute not applicable to this channel
- 228 C value is not suitable
- 229 C channel is outside the device

IML – OTHER COMMANDS

- 300 SHOW – channel number not available
- 301 SHOW – channel name not known
- 302 SHOW – channel grouped with preceding channel
- 303 SHOW – unrecognised attribute code
- 304 LIST – wrong or missing parameters
- 305 DESCRIBE – channel number not available
- 306 DESCRIBE – channel name not known, or range not allowed

- 310 READ – channel number not available
- 311 READ – channel name not known
- 312 READ – range of channels not correctly specified
- 313 READ – channel is not enabled, or is grouped
- 314 READ – channel does not support Read command

- 320 WRITE – channel number not available
- 321 WRITE – channel name not known
- 322 WRITE – channel cannot accept output data
- 323 WRITE – channel is not enabled, or is grouped
- 324 WRITE – value is missing, or in wrong format
- 330 CLEAR – channel number not available
- 331 CLEAR – channel name not known
- 332 CLEAR – range of channels not correctly specified
- 333 CLEAR – channel is grouped with another

- 340 CCONFIG – wrong category specified
- 341 CCONFIG - value not acceptable for this category
- 342 CCONFIG – ASCII code list too long

343 CCONFIG – attempt to give character two conflicting meanings
344 DCONFIG – wrong category specified
345 COPTIONS – wrong option specified
346 COPTIONS – value is not 1 or 0

350 ZERO – channel number not available
351 ZERO – channel name not known
352 ZERO – channel number not available
353 ZERO – channel is not enabled
354 ZERO – channel not of correct type
355 ZERO – channel subfunction not available
356 ZERO AUTO – not possible to set zero level
357 ZERO DEF – offset not acceptable
358 ZERO DEF – ratio not acceptable
360 SAVE – wrong parameter specified

370 LEARN / END – wrong name given for macro
371 END encountered while not learning

380 CHW – unacceptable secondary address
381 CHW – unrecognised module name
382 CHW – unacceptable version number

390 STREAM – module number not acceptable
391 STREAM – byte count not acceptable
392 STREAM – trigger pulse width not acceptable

400 BSTREAM – bad channel number
401 BSTREAM – unacceptable byte count
402 BSTREAM – bad minimum packet size
403 BSTREAM – bad maximum packet size
404 BSTREAM – bad trigger flag

410 LIMITS – channel number not available
411 LIMITS – channel name not known
412 LIMITS – range of channels not correctly specified
413 LIMITS – channel is disabled or grouped
414 LIMMITS – this channel does not support Limits command

420 ESCAPE – channel number not available
421 ESCAPE – channel name not known or range not allowed

422 ESCAPE – no escape functions on this channel
423 ESCAPE – unsupported (or missing) function name
424 ESCAPE – required data value is missing
425 ESCAPE – data value is unacceptable

APPLICATIONS

1000 to 1999 are application specific errors

2000 User aborted operation
2001 No filename specified
2002 Dialog out of memory
2003 Too many channels connected
2004 No channels connected

2005 IML REPORT error
2006 Out of local heap space
2007 Common dialog failed
2008 No suitable channels exist
2009 Timeout waiting for IML reply

For IML 4.01 Oct 1992

For help on dealing with errors please see windmill.co.uk/techsupp.html or the program Help.